

# Instructions for replacing the Kitlock digital locking system with EuroLock

Tools required:



Cross-head screwdriver




Open-end spanner SW 19 / 14

Instructions:


## Step 1

- Remove the lock bolt from the lock
- Loosen and remove the M16 nut
- Dismantle the lock

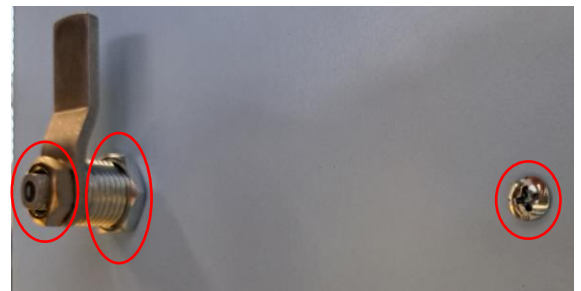


## Step 2

- Print out the drilling template (set printer layout to 100%) and check the dimensions
- Fix the template in place using the existing hole and align the template straight
- Drill a second hole (diameter approx. 4 - 4.5 mm)

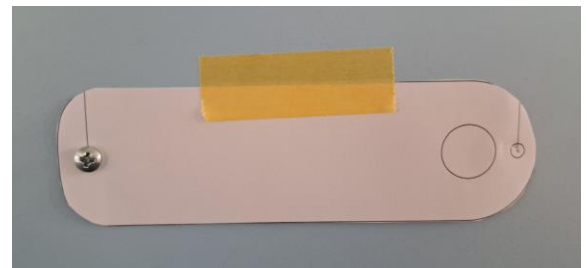

### Step 3

- Prepare the seal of the lock for assembly

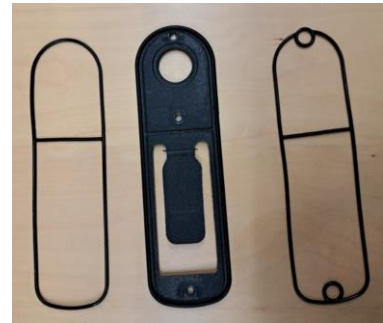

### Step 4

- Fit the seal incl. Lock
- Use 5 mm longer screws for this



### Step 5

- Fit the new lock bolt using the screw and supplied screw and flat washer

